

POP-UP TENT SET-UP

Please carefully read this important information before use.

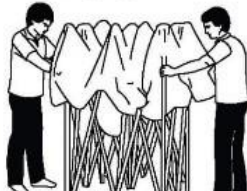
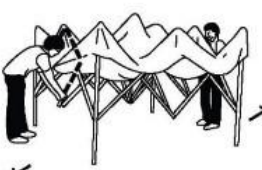
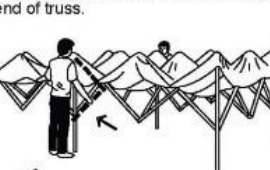
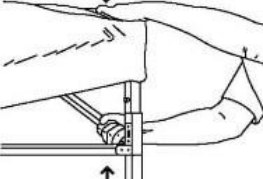

Once the tent is set up, ensure the tent is weighed down with tent weights provided.

The tent is designed as a temporary shelter from sun. In extreme weather conditions such as high winds and heavy rain, please take down tent immediately to avoid damage and injury.


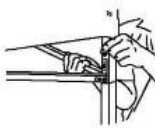
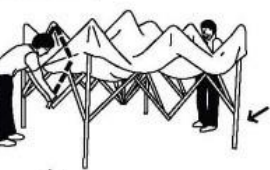
Do not leave the tent unattended.

SHELTER INSTALLATION INSTRUCTIONS

Please read each step before you attempt set-up!

<p>1 Place shelter in center of area to be sheltered. Remove cover. Have 2 people stand on opposite sides, grasp two outer legs, lift off of ground and step backwards, stopping at arms length.</p> 	<p>2a Grasp the bottom of the diamond (shown), on opposite sides. Lift up, and step backwards until shelter is fully opened, being careful not to pinch fingers (for 10'x20' shelter see 2b).</p> 	<p>2b (For 10'x20' shelter) Each person should move to middle leg of 20' side. Grasp at bottom of diamond (shown), lift up and step backwards at the same time until shelter is fully opened, being careful not to pinch fingers at end of truss.</p> 
<p>3 Engage the auto slider at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap Button will engage in groove. Repeat on all other legs.</p> 	<p>4 Lift two adjacent outer legs up and pull out the inner legs until snap locks. Repeat on all legs. Raise or level the shelter using adjustment holes found near bottom of each outer leg.</p> 	<p>IMPORTANT</p> <ul style="list-style-type: none"> • WINDY CONDITIONS: Use stake kit or weight bag set • HEAVY WIND: Take shelter down. • WET FABRIC: Let shelter dry before closing. • STORAGE: Use cover bag when not in use. • CLEANING: Use mild detergent and water. • RAIN: Do not leave shelter unattended.

HOW TO TAKE DOWN YOUR SHELTER

<p>1 Lift two outer legs slightly, depress snap button, telescope inner legs into outer legs. Repeat on opposite side.</p> 	<p>2 Release auto slider at each corner by pushing Snap-Button to release pressure on slider. Repeat on all four corners.</p> <p>RELEASE SNAP-BUTTON</p> 	<p>3 Grasp top of diamond on opposite sides, lift up, shake shelter a little while stepping towards partner until unit is ¾ closed. Grasp two outer legs, push together to fully close (do not pinch fingers). Put on cover bag.</p> 
---	---	---